



Over ride fuse

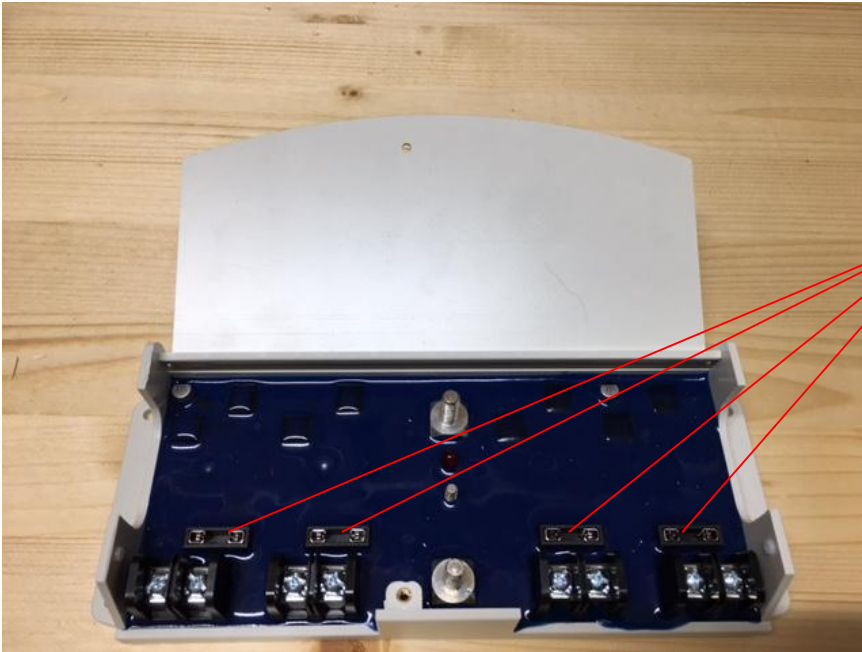

If your system does not work can you temporarily get it to work by inserting a standard blade fuse. Place the fuse in the fuse holder for the specific out put you want to work temporarily. Be aware to use the right Amperage.

Measuring the Voltage .

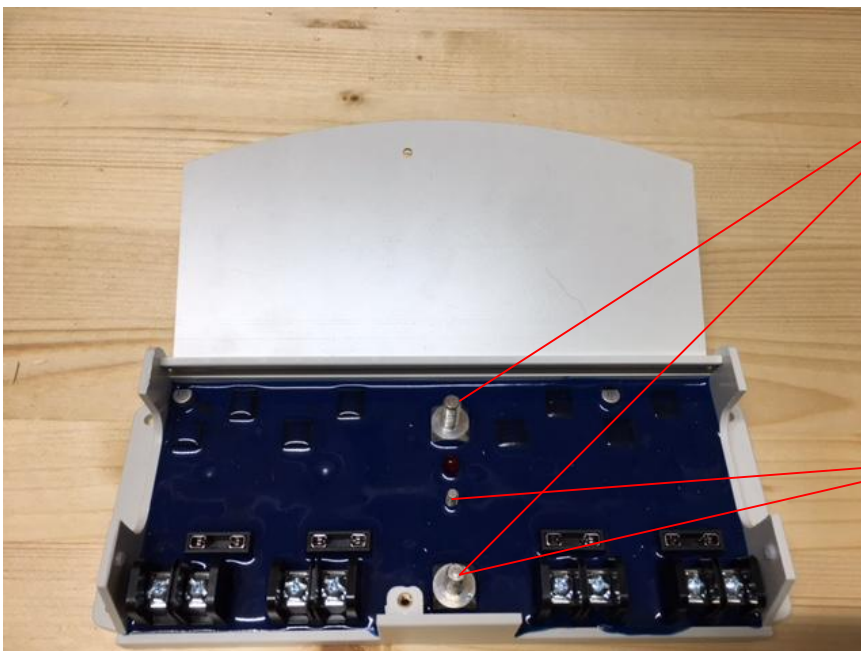

Measure to see if the unite has power. Battery cable red and ground cable black

Measure to see if the communication cable has power. Communication cable violet and ground black