


High Amp Override

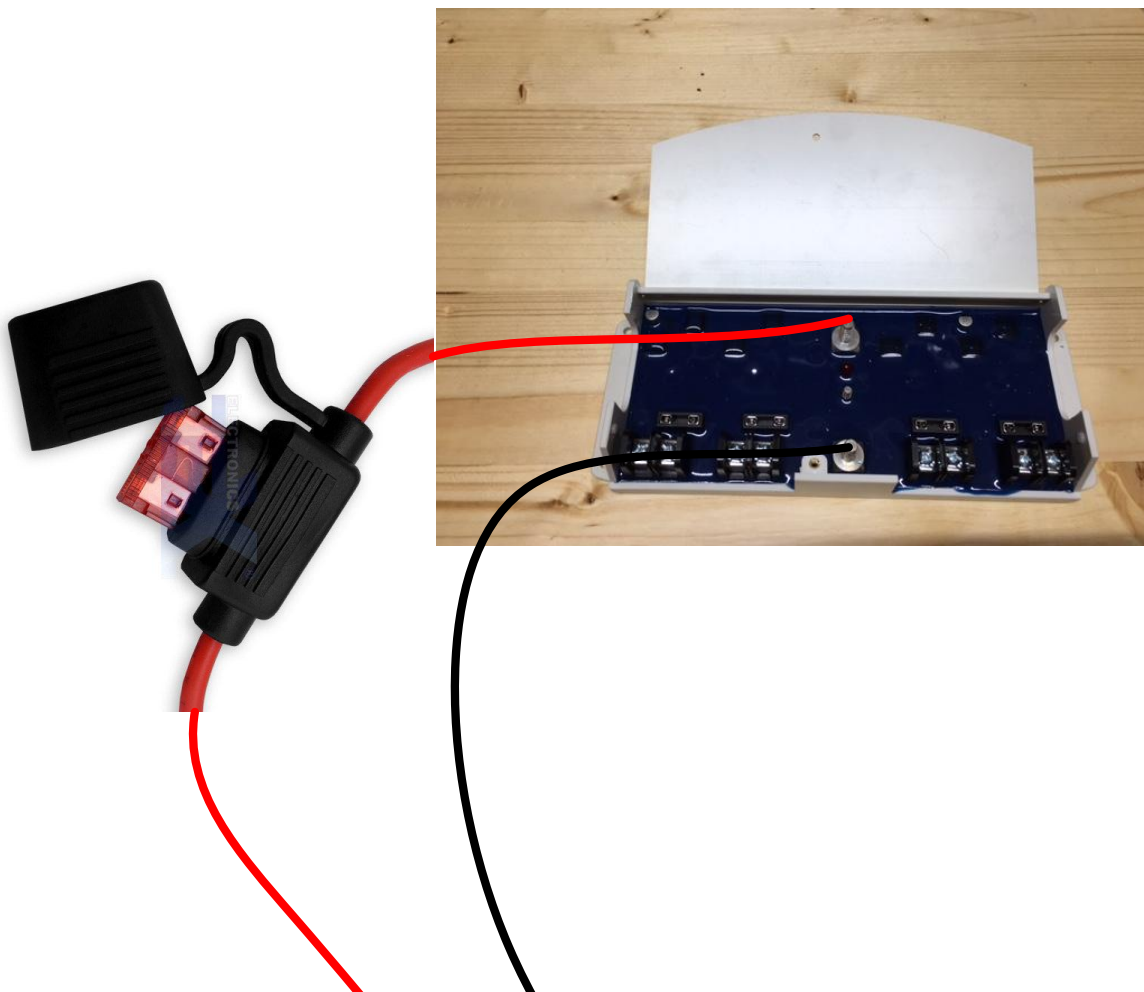

Equipement

- Disconnect the equipement from the node.
- Connect the ground from the equipement to the main ground on the node unite.
- Connect the fuse holder to the main battery connection of the node unite.
- Connect the fuse holder to the battery cable of the equipement.
- Insert fuse in the fuse holder.